

Fax Server IP

Connecting to a fax line

Connect one end of the telephone cable to the telephone line wall socket. Connect the other side of the telephone cable to the Line connector at the back of the Fax Server IP.

