

Fax Server PRI Connection Diagram

The Fax Server PRI is connected in series with the PBX. It is possible that you do not want to connect the PBX together with the Fax Server on one line because you want to use the line for faxing only. In this case make no connection to the PBX. Another option is to use all 30 channels of the E1 line for faxing.

